



1969 Belvedere Satellite ROAD RUNNER & **PLYMOUTH** GTX




WIRING DIAGRAM MANUAL

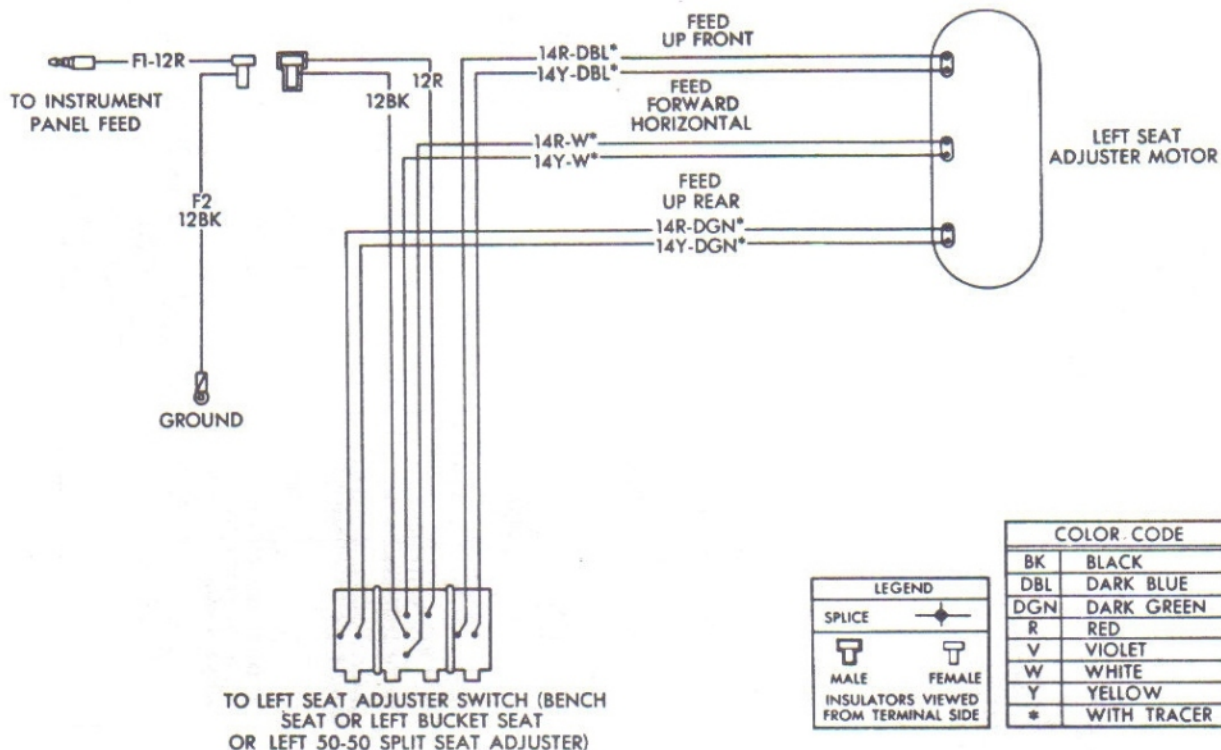


Power Seat . . 1969

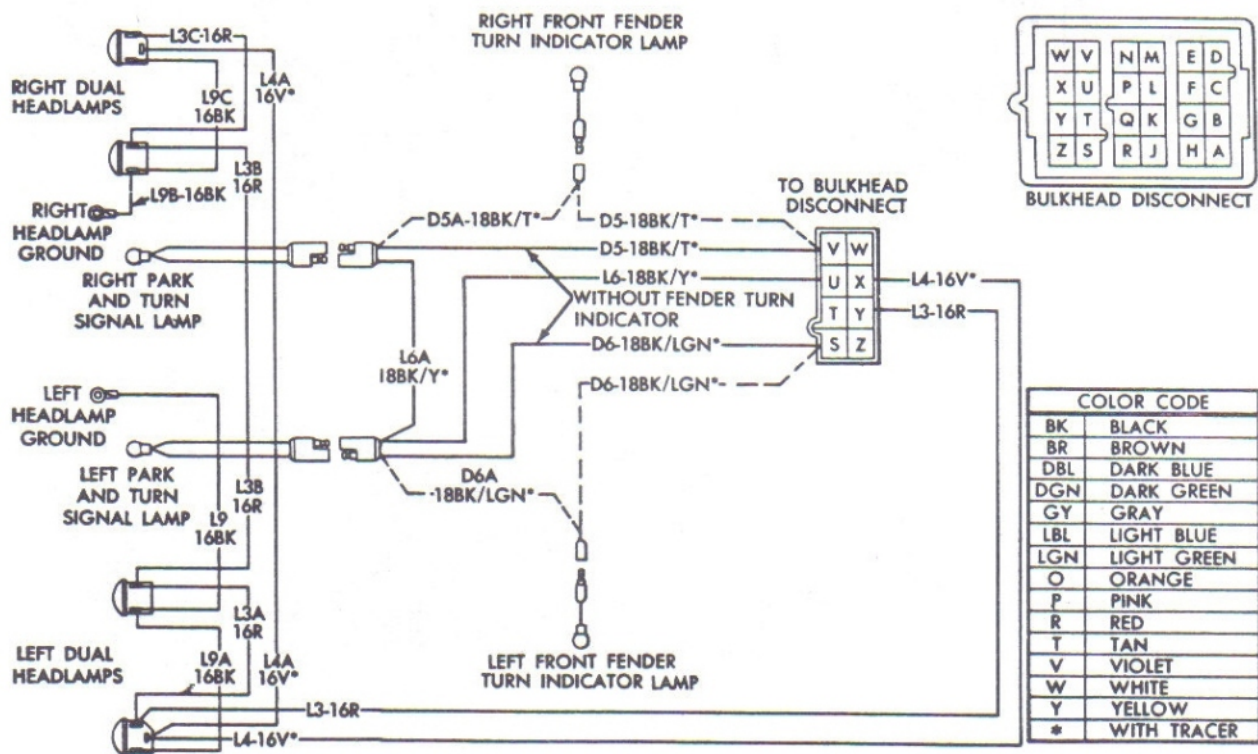

Front End Lighting . . 1969 Belvedere & Satellite

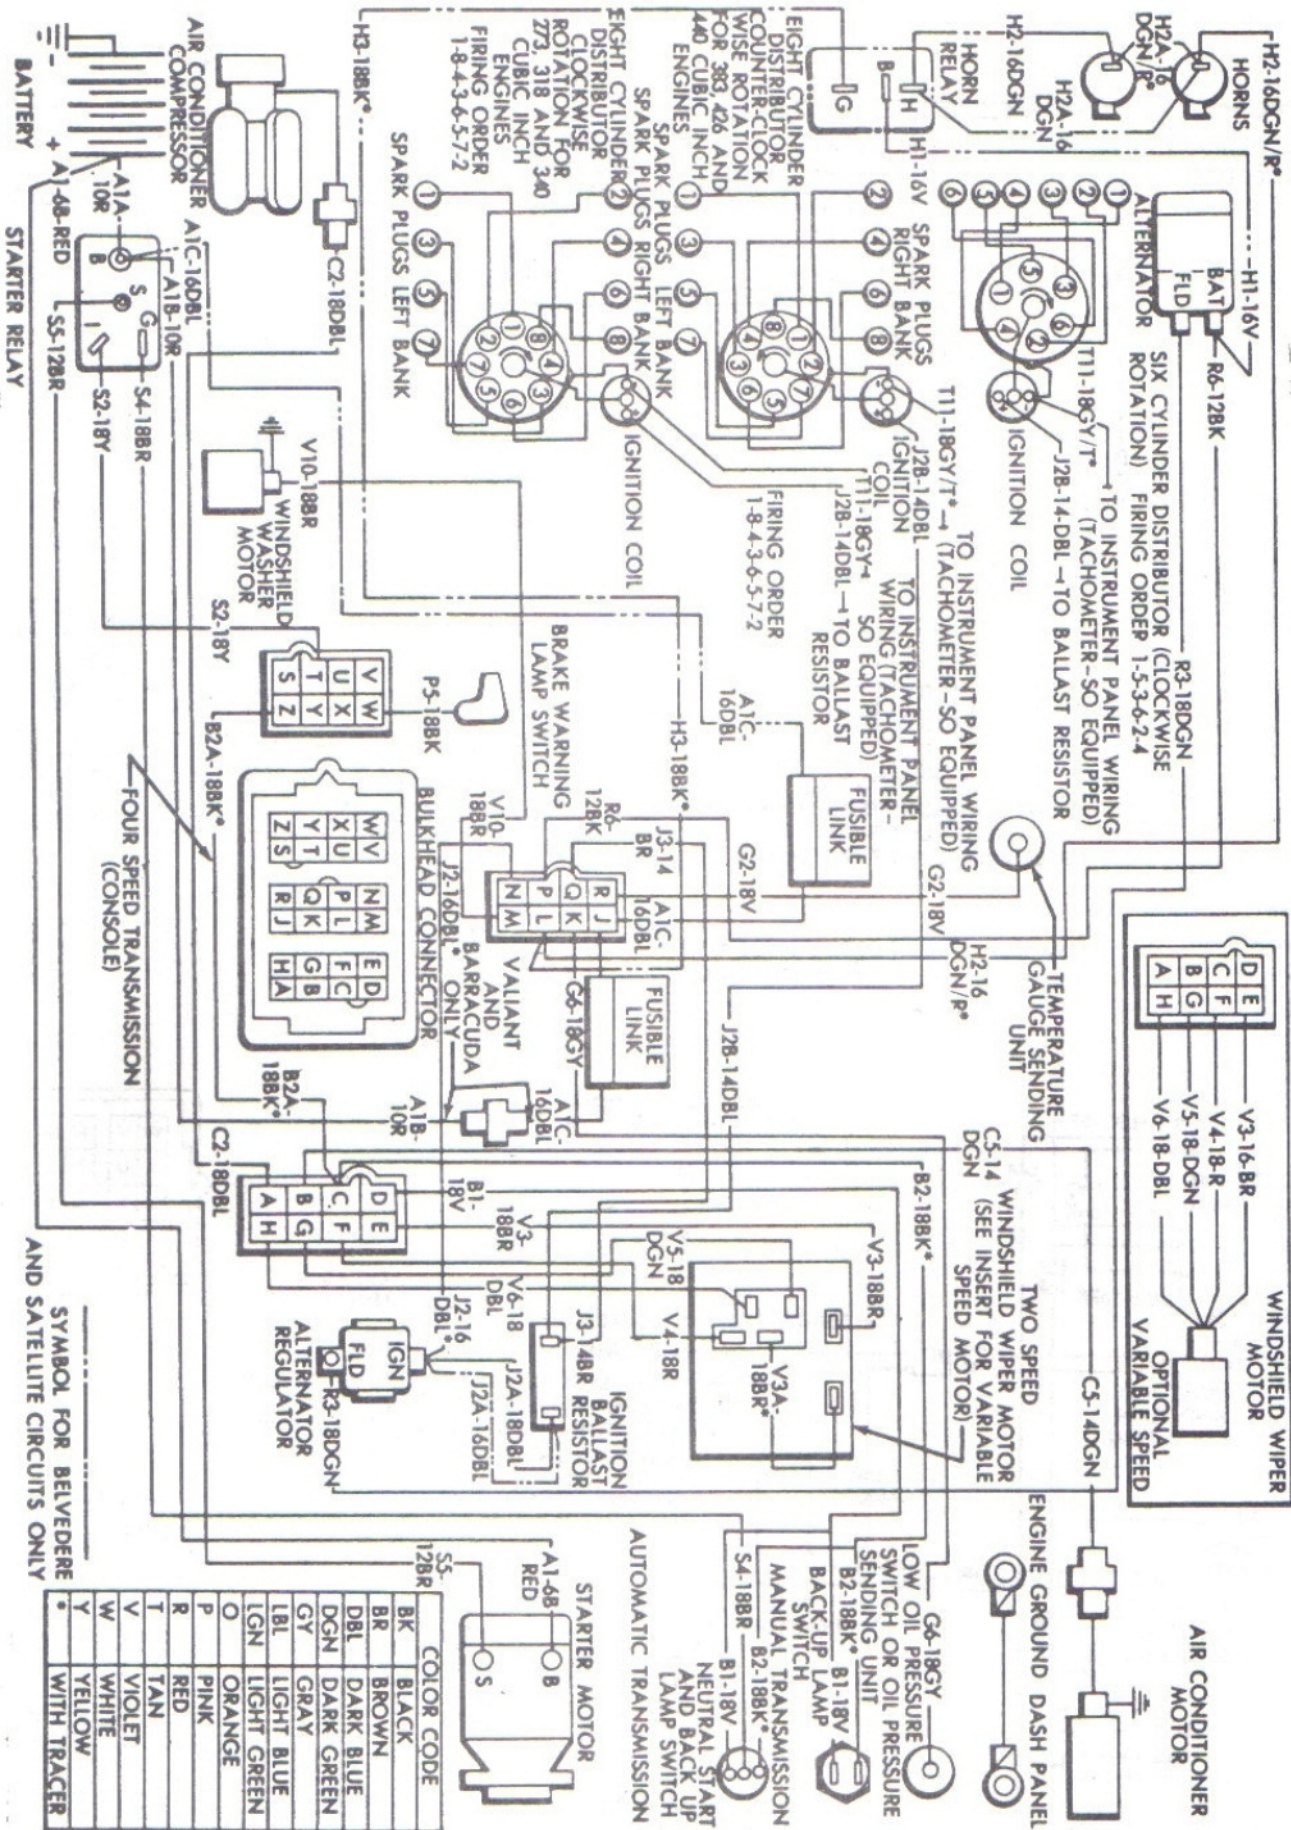

Engine Compartment . . 1969 Belvedere & Satellite (exc. Hemi)

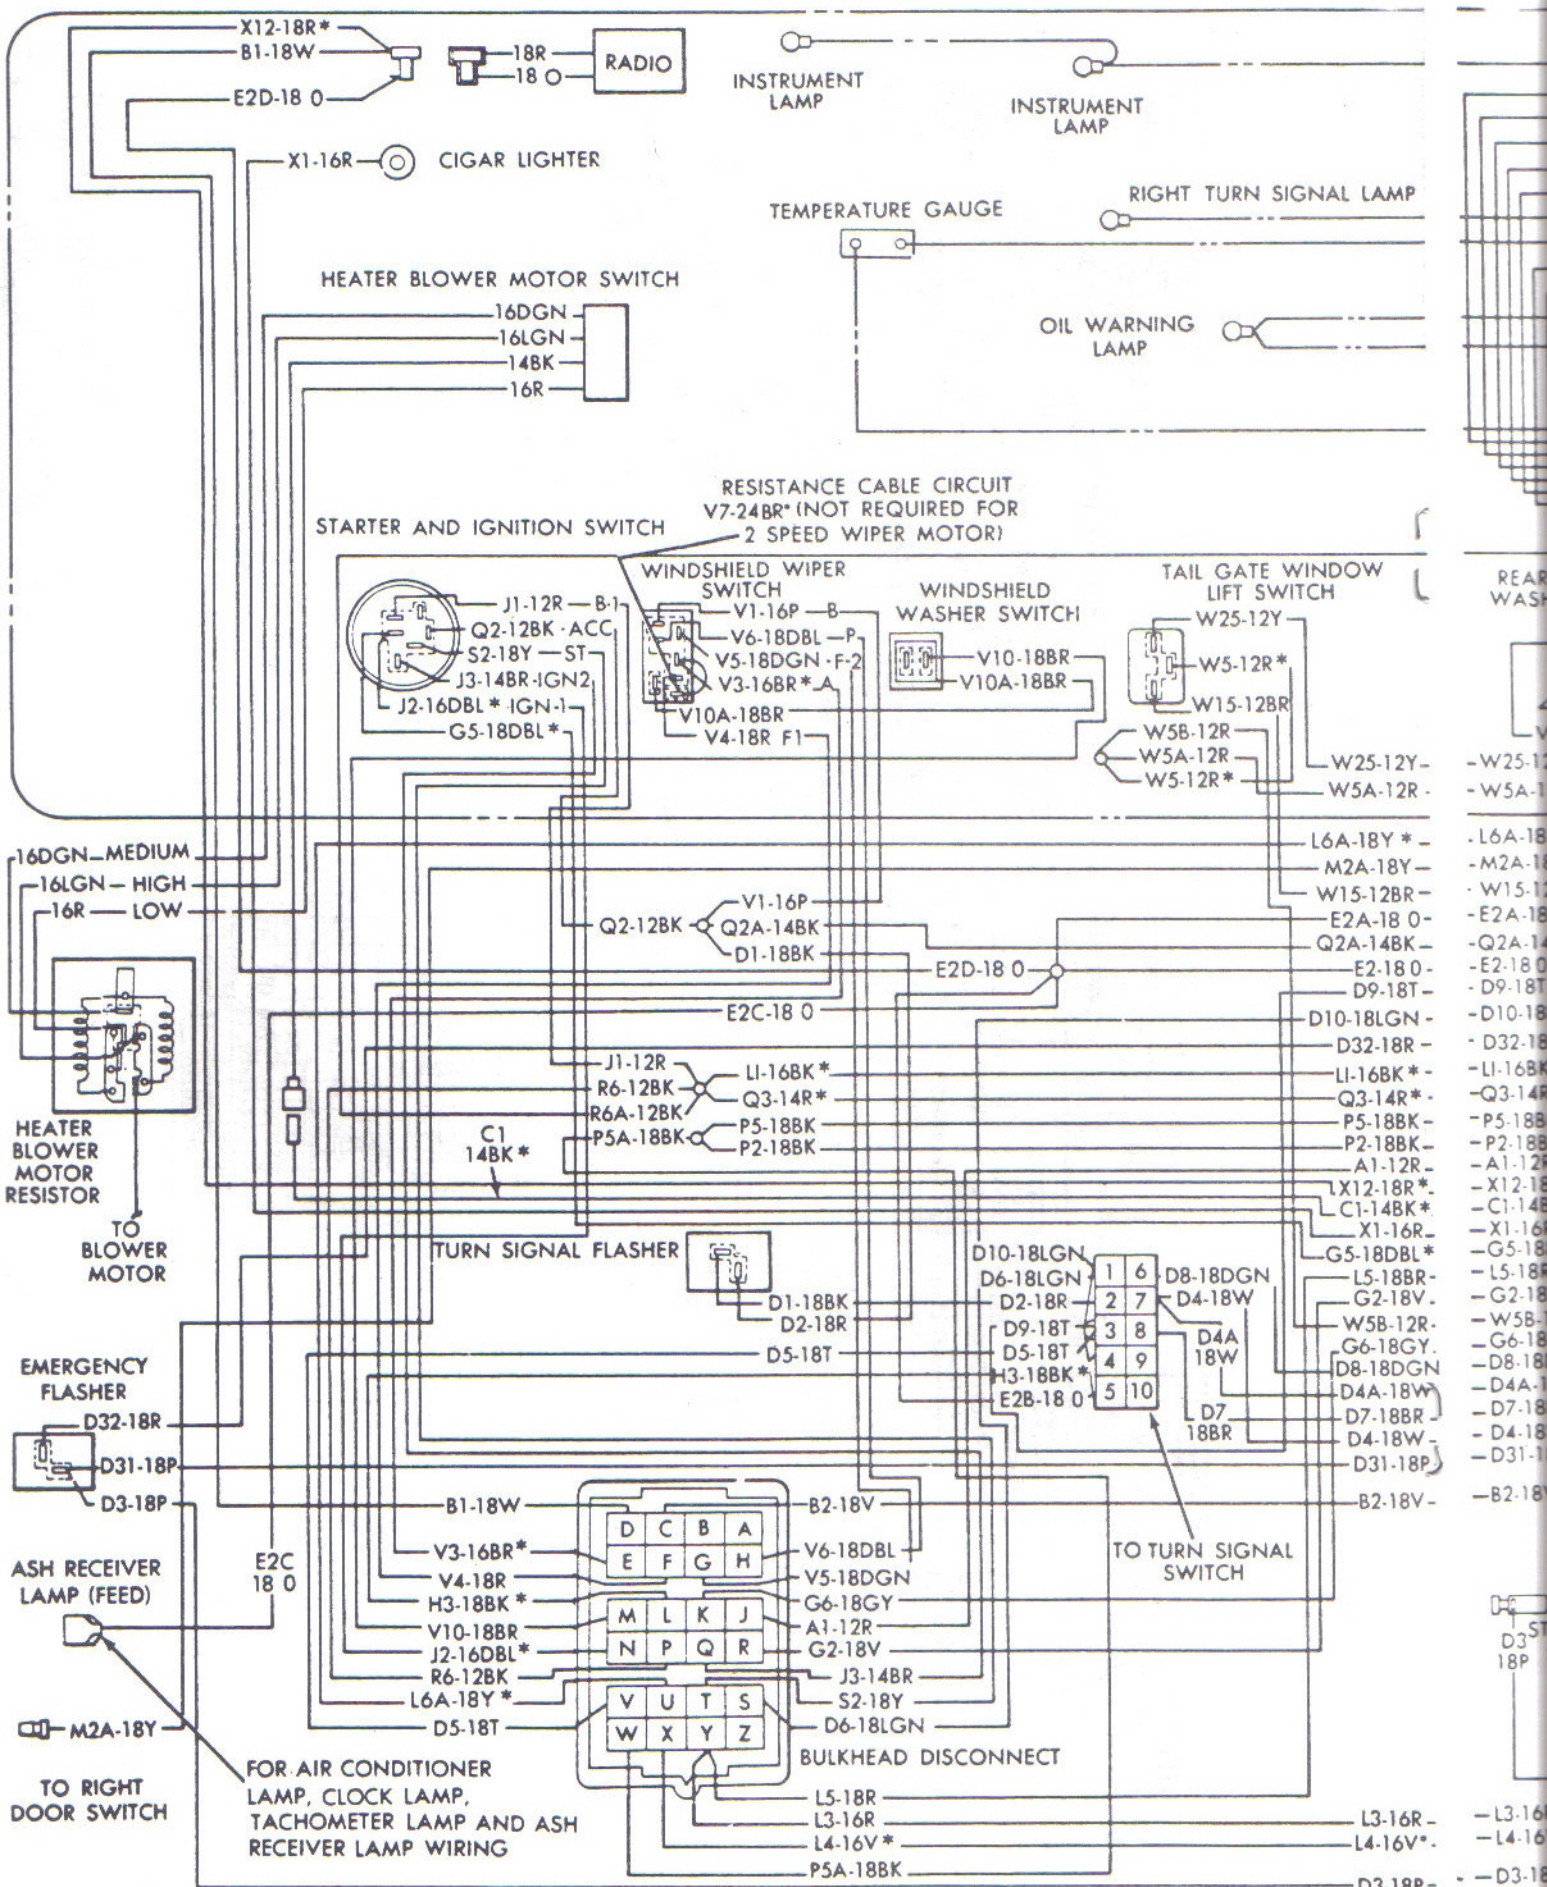

LAMP

OW

25-12Y
5A-12R

18Y *

A-18Y

5-12BR

A-18 O

A-14BK

E-218 O

D-9-18T

18LGN

32-18R

16BK *

G-14R *

5-18BK

2-18BK

A-1-12R

2-18R *

1-14BK *

X1-16R

18DBL *

5-18BR

58-12R

6-18GY

18DGN


4A-18W


7-18BR

4-18W


31-18P

82-18V

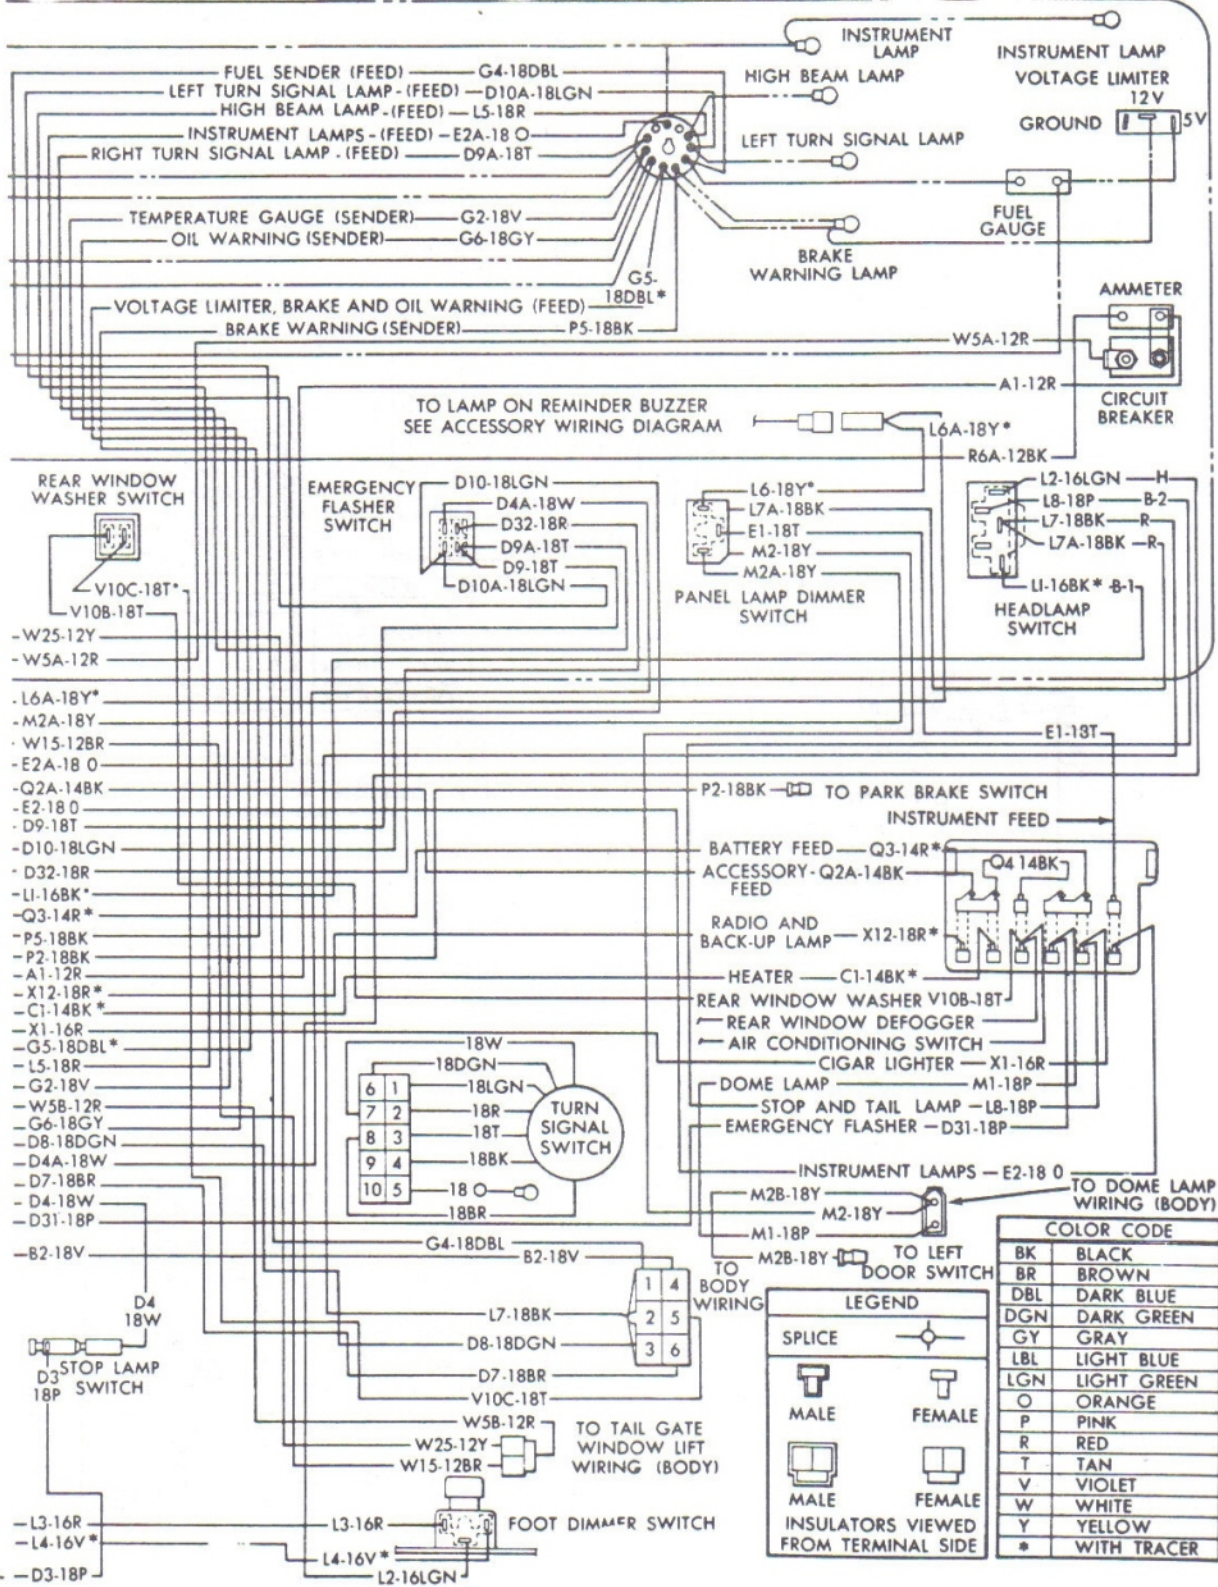


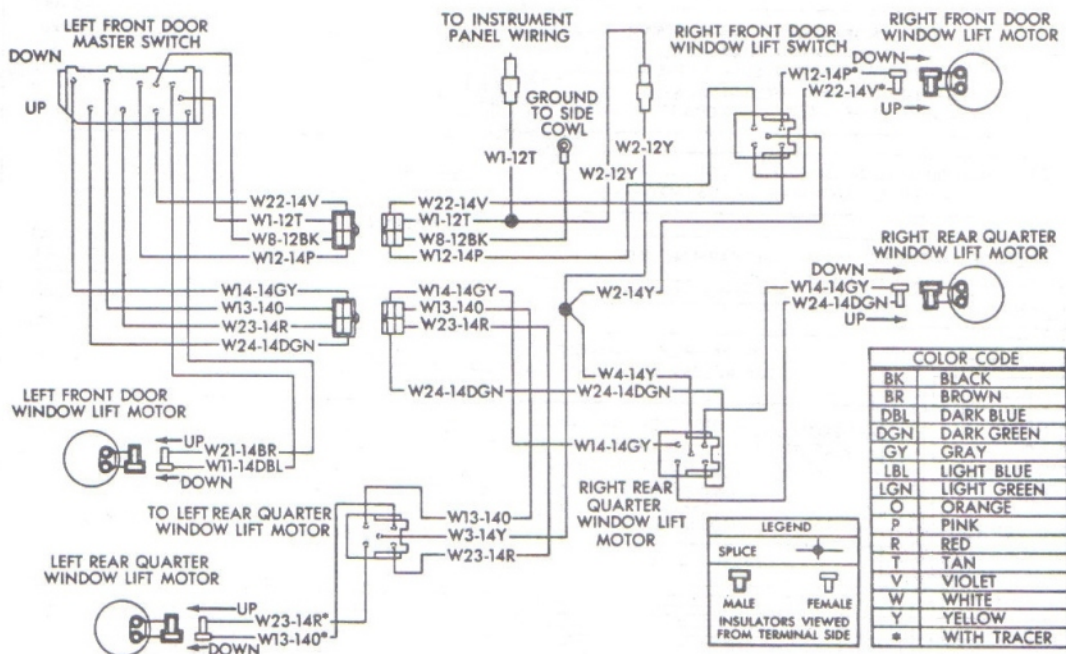


Power Windows . . 1969 Belvedere & Satellite

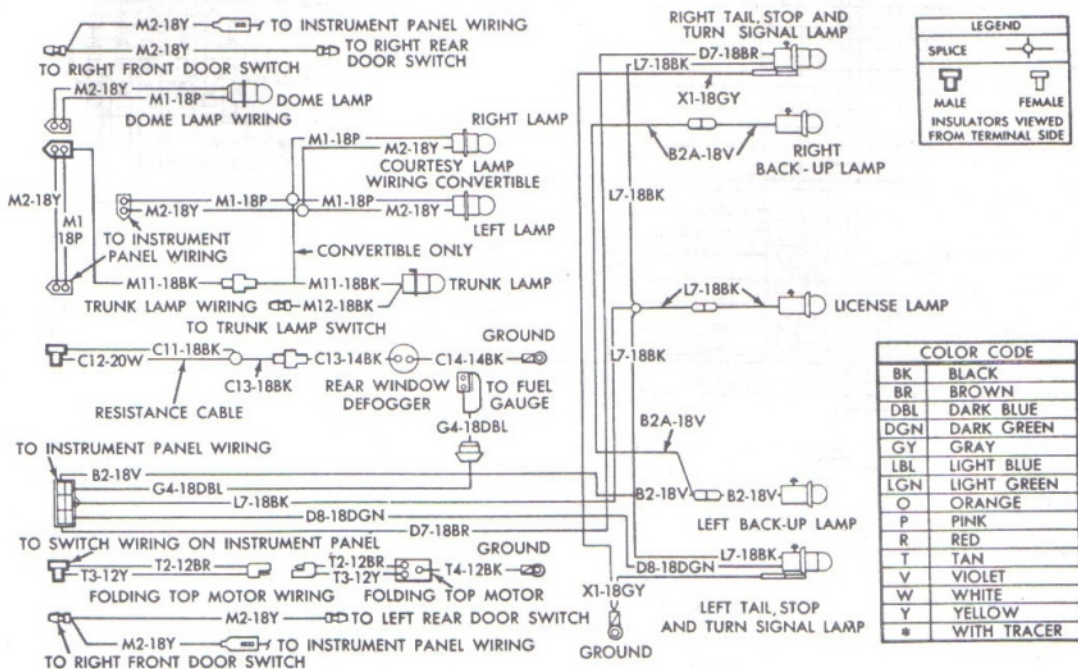


Body Wiring . . 1969 Belvedere & Satellite (exc. Wagon)

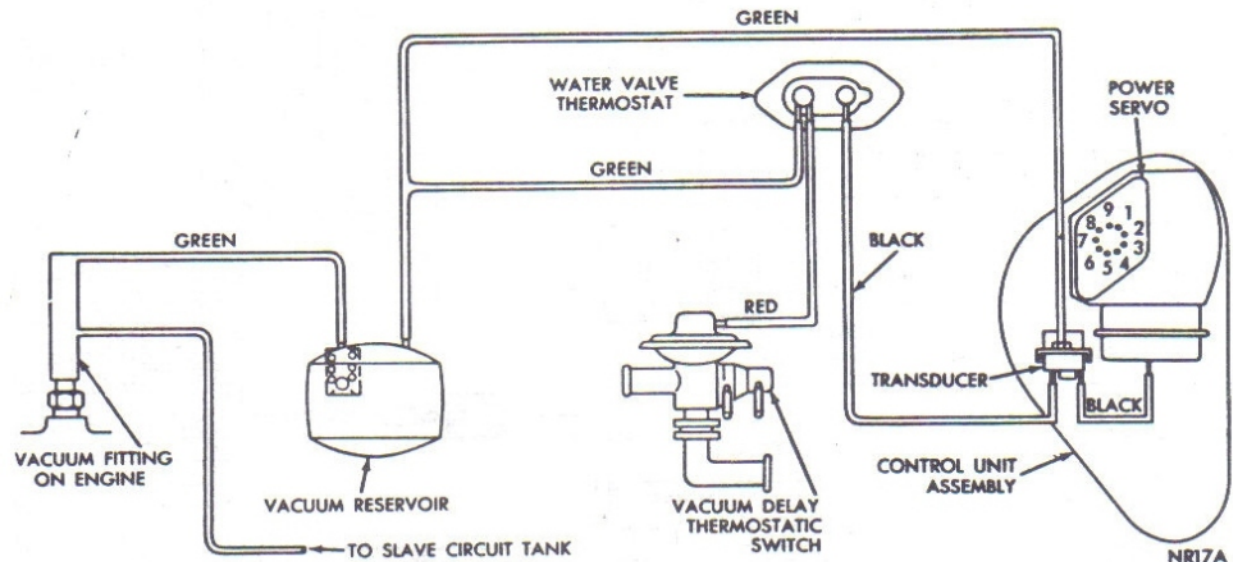


Auto-Temp Control Vacuum Circuit . . 1969

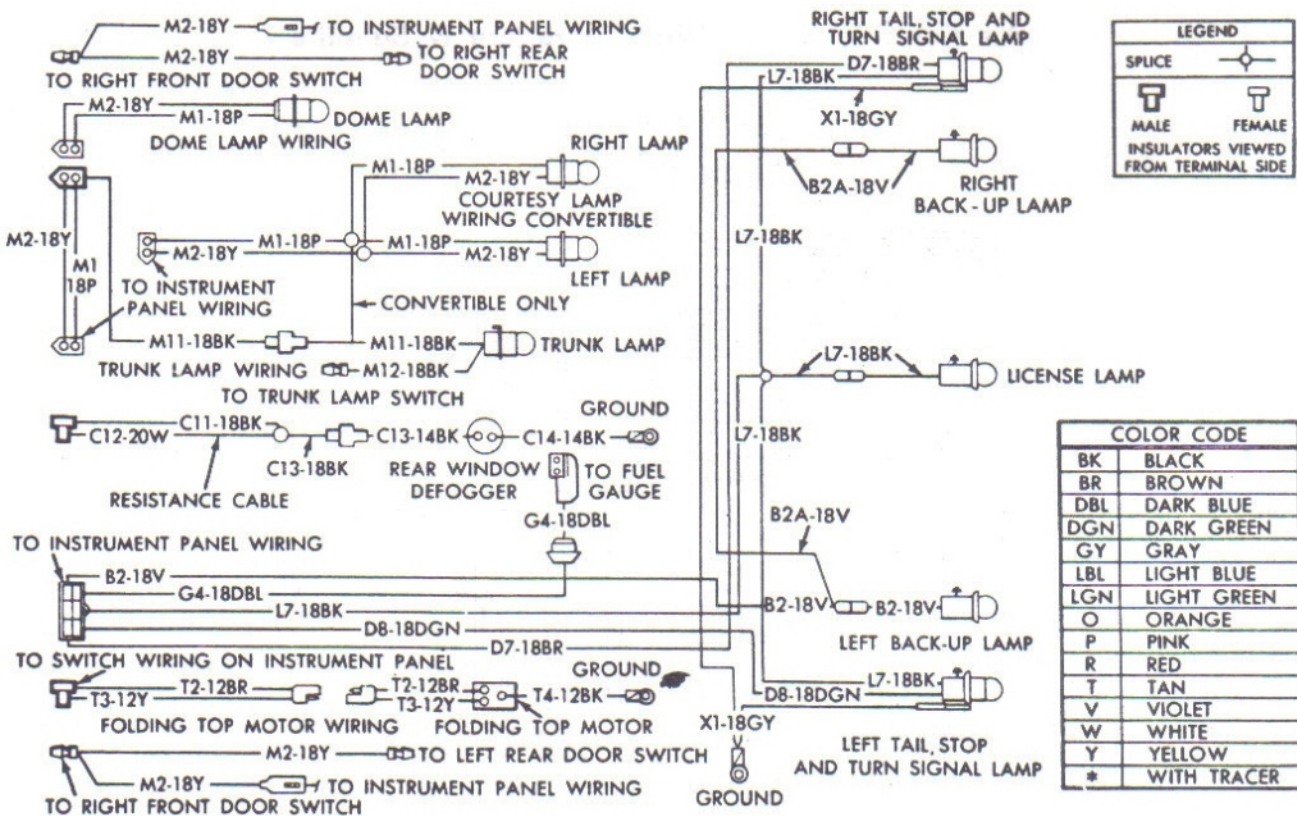

Body Wiring . . 1969 Belvedere & Satellite Wagon

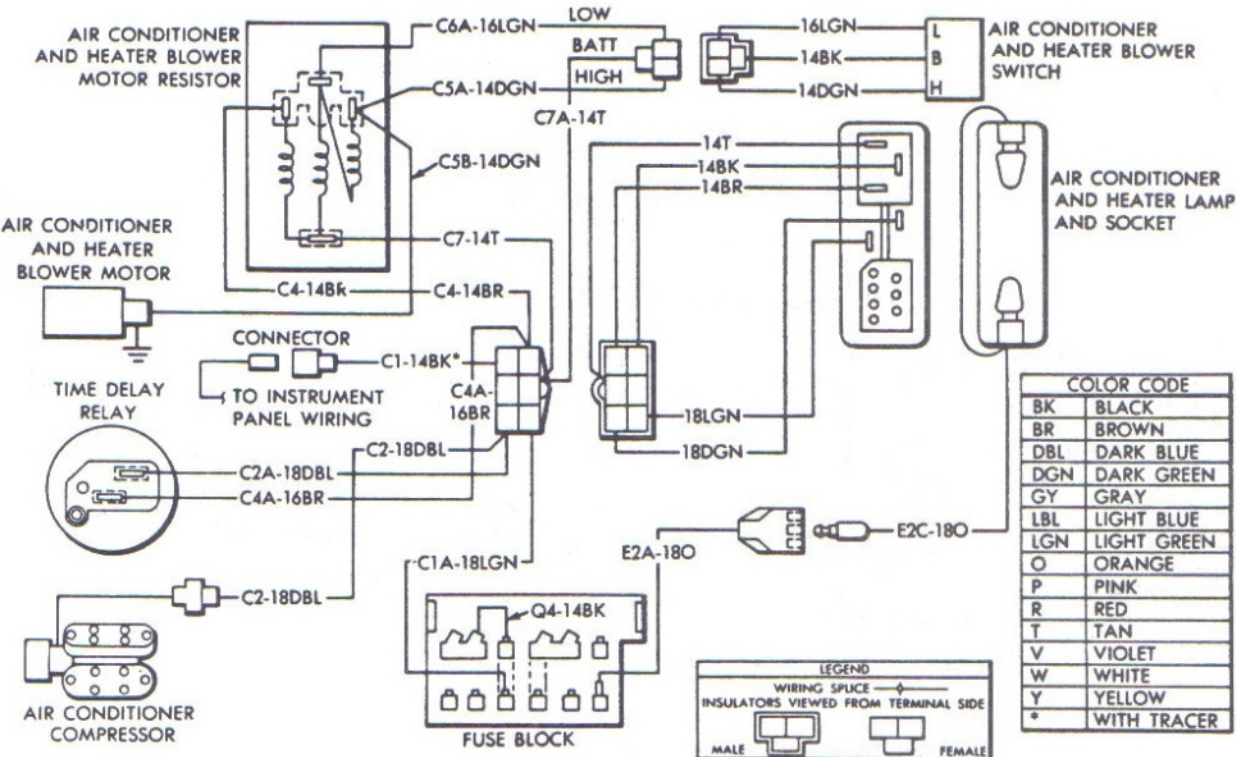

Air Conditioner . . 1969 Belvedere & Satellite

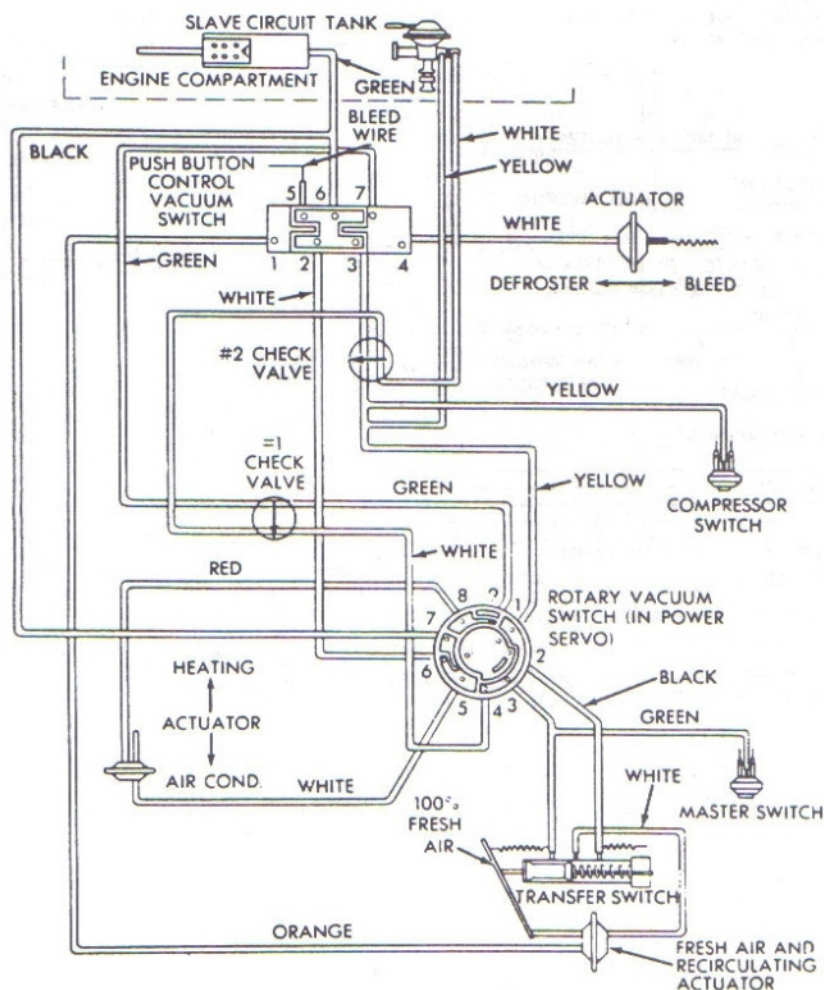

Auto-Temp Vacuum Slave Circuit . . 1969